

# ftp\_size

WM-MINI2, WM-MEGA FW >= 2.1137 WM-M2 FW >= 3.1137

Get the file size of a file on the remote FTP server

## Description

`int ftp_size ( string $filename )`

Return the file size of a file on the remote server.

## Parameters

`$filename: String` file name with our without path of the remote file

## Return Values

`int`: Size of the file in bytes if the value is above or equal to 0.

If the return value is -1, the function failed due to network or other issues.

If the return value is -2, the remote file does not exist.

## Example

```
<?
    $res = ftp_open("ftp.myserver.com",21,"myuser","mypassword");
    if ($res) {

        // get the current directory on the server

        $res=ftp_size("myfile.txt");

        print("File size is: ".$res."\r\n");

        ftp_close();
    }
?>
```

## See Also

[ftp\\_open\(\)](#) - Open an FTP connection

[ftp\\_close\(\)](#) - Close an FTP connection

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**



Permanent link:

[http://wattmon.com/dokuwiki/uphp/functions/ftp\\_size?rev=1561719780](http://wattmon.com/dokuwiki/uphp/functions/ftp_size?rev=1561719780)

Last update: **2021/09/13 05:56**