

# ow\_read

WMPRO >= 1.0 WMMEGA FW >= 2.0

Read a byte from the OneWire bus

## Description

`int ow_read ( )`

This function will read a single byte from the OneWire bus. This is a low level function allowing custom OneWire operations.

## Parameters

None

## Return Values

An **integer** value of the byte from the bus, or 0 if nothing was available

## Example

```
<?
$res=ow_read();
print("Got ".$res." from the OneWire bus.");
?>
```

## See Also

[ow\\_first\(\)](#) - Initiate a OneWire bus scan and return the address of the first device found

[ow\\_next\(\)](#) - Return the address of the next OneWire device found (after an [ow\\_first\(\)](#))

[ow\\_read\\_temp\(\)](#) - Read a temperature from a device on the OneWire bus

[ow\\_reset\(\)](#) - Reset the OneWire bus

[ow\\_write\(\)](#) - Write a byte to the OneWire bus

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

[http://wattmon.com/dokuwiki/uphp/functions/ow\\_read](http://wattmon.com/dokuwiki/uphp/functions/ow_read)

Last update: **2021/09/13 05:57**

