

ow_read

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Read a byte from the Onewire bus

Description

`int ow_read()`

Parameter

none

Return Values

An `int` value containing the byte from the bus or 0 if nothing was read.

Example

```
<pre><?
$res=ow_read();
print("Got ".$res." from onewire bus.");
?>
```

See Also

[ow_first\(\)](#) - Get the first device on the bus

[ow_next\(\)](#) - Get next device on bus

[ow_read_temp\(\)](#) - Read a temperature from a device

[ow_reset\(\)](#) - Reset the onewire bus

[ow_write\(\)](#) - Write to onewire bus

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**



Permanent link:

http://wattmon.com/dokuwiki/uphp/functions/ow_read?rev=1494497085

Last update: **2021/09/13 05:56**