

ow_read

WMPRO >= 1.0 WMMEGA FW >= 2.0

Read a byte from the OneWire bus

Description

```
int ow_read( )
```

This function will read a single byte from the OneWire bus. This is a low level function allowing custom OneWire operations.

Parameters

None

Return Values

An **integer** value of the byte from the bus, or 0 if nothing was available

Example

```
<?
  $res=ow_read();
  print("Got ".$res." from the OneWire bus.");
?>
```

See Also

[ow_first\(\)](#) - Initiate a OneWire bus scan and return the address of the first device found

[ow_next\(\)](#) - Return the address of the next OneWire device found (after an `ow_first`)

[ow_read_temp\(\)](#) - Read a temperature from a device on the OneWire bus

[ow_reset\(\)](#) - Reset the OneWire bus

[ow_write\(\)](#) - Write a byte to the OneWire bus

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**



Permanent link:

http://wattmon.com/dokuwiki/uphp/functions/ow_read?rev=1494545481

Last update: **2021/09/13 05:56**