

Serial and Modbus Function Reference

uPHP functions related to the serial port and Modbus are shown below:

Click on the function name for further details:

FUNCTION NAME	PARAMETER(S)	RETURN	DESCRIPTION		
f485open	int baud, int parity	int handle or 0	Open the RS-485 port at the specified baud rate and parity		
fclose	int handle		Close a file, stream or socket		
feof	int handle	int 1 or 0	Test if no more data is available in a file, stream or socket		
fgets	int handle, int size	string or int -1	Return a single line from a file, stream or socket, with optional size limit		
filesize	string filename or int handle	int bytes	Return the size of a file, or the number of unread bytes in a stream or socket		
fread	int handle, int bytes	string or int 0	Read bytes from a file, stream or socket		
fseropen	int baud, int blocking, int invert, int parity	int handle or 0	Open the serial port at the specified baud rate with optional parameters		
fsockopen	string host, int port, int timeout	int handle or 0	Open an internet socket connection with optional [[[.functions:fwrite]]] int handle, mixed data, int length	int bytes written or -1	Write data to a file, stream or socket
mb_delete_device	int id	int 1=OK	Delete a device from the list of active devices		
mb_get_dev_by_id	int id	array	Return modbus device details by id		
mb_get_dev_by_index	int index	array	Return modbus device details by index		
mb_get_dev_by_name	string name	array	Return modbus device details by name		
mb_get_dev_info	int type	array	Return modbus device details by type		
mb_get_role_array		array	Return an array of all roles and their values		
mb_get_status_by_role	int role	int 1=OK	Return status of the device attached to the role		
mb_get_val_by_role	int role	number	Return value of the role		
mb_num_devices		int	Return number of devices on the modbus		

FUNCTION NAME	PARAMETER(S)	RETURN	DESCRIPTION		
mb_queue_command	mixed values ...	array of numbers	Queue a sequence of characters to the RS-485 bus and get but ignore the reply		
mb_scan_complete		int 1=complete, 0=ongoing	Check to see if a modbus scan has completed		
mb_scan_percent		number percent completed	Return scan percentage completed		
mb_send_command	mixed values ...	array of numbers	Send a sequence of characters to the RS-485 bus and get a reply		
mb_set_dev_var	string name or int id, string variable, mixed value	int 1=OK	Set a variable on a modbus device		
mb_set_val_by_role	int role, number value	int 1=OK	Set a role value on a modbus device		
mb_start_scan	int start, int end		Initiate an automatic scan of the modbus		

From:

<http://wattmon.com/dokuwiki/> - Wattmon Documentation Wiki

Permanent link:

http://wattmon.com/dokuwiki/uphp/modbus_functions?rev=1561606001Last update: **2021/09/13 05:56**