

freestack

WMPRO, WMMINI FW >= 1.924 WMMEGA FW >= 2.0

Return free stack space

Description

`int` freestack ()

Parameters

None

Return Values

Integer number of bytes available in the stack

Example

```
<?  
  $free=freestack();  
  print($free." bytes available in the stack");  
?>
```

See Also

[disk_free_space\(\)](#) - Return free space on microSD card

[freemem\(\)](#) - Return free memory space

[nvram_free\(\)](#) - Return the number of bytes available in NVRAM

From:

<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

<http://www.wattmon.com/dokuwiki/uphp/functions/freestack>

Last update: **2021/09/13 05:57**

