

microtime

WMPRO, WMMINI FW \geq 1.0 WMMEGA FW \geq 2.0

Return the number of milliseconds since boot

Description

`int` `microtime ()`

Parameters

None

Return Values

Integer: Milliseconds since boot

See Also

[mktime\(\)](#) - Return the Linux Timestamp for a given date and time

[settime\(\)](#) - Set the system time from a Linux Timestamp, with optional calibration

[strftime\(\)](#) - Format a Linux Timestamp using a format **string**

[time\(\)](#) - Return the current system timestamp

[timefromfat\(\)](#) - Convert a FAT filetime to a Linux Timestamp

[uptime\(\)](#) - Return the uptime in milliseconds

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

<https://www.wattmon.com/dokuwiki/uphp/functions/microtime>

Last update: **2021/09/13 05:57**

